

The MLM-2 is a 2 channel microphone mixer designed to expand the area of coverage of a large area to be monitored. It can be used directly with DVRs, IP cameras or can be connected to ETS base stations.

ML1 Microphone Placement

Locate the ML1 microphones as close as possible to the areas of interest in the space to be monitored. Do not mount the microphones near air conditioning vents, light fixtures or electrical equipment. The MLM1's should be placed as close as possible to the subject(s) to be monitored. An ML1 is usable at distances of up to 25 feet but is dependent on the level of background noise in the area. Experimentation in the environment will determine what distances work best.

MLM-2 location and power

The MLM-2 interface box is designed to be located next to a DVR or IP camera. The MLM-2 requires a 120VAC power source within 3 feet of its location. If this is not possible in your application, you can splice in up to 100 feet of 18 awg, 2 conductor cable to extend the distance between the AC power source and the MLM-2.

Cable Run

Order ML1 series microphones with up to 30 foot long cables.

Microphone level controls

Each microphone level can be adjusted to a higher or lower volume so that all microphones can be balanced out for similar sound levels (one microphone dominates the overall sound, for example). Experiment by adjusting each level control to achieve the desired overall volume.

Low cut filters

Each microphone input has a low cut filter that can be turned on to reduce background noise. Place the switch in the LC position to cut out the low frequencies.

Audio output

This output is typically connected to the audio input of the DVR, IP camera, etc. It can be set for mic or line level output. You can extend the output up cable up to 1000 feet using audio coaxial cable and 2 field installable RCA (or 3.5mm) connectors.

Base station Connection

This output can be connected to any ETS base station or interface microphone input. The AC adaptor that comes with the MLM-2 is not required because it is powered up by the ETS base station or interface. All three connections, +, -, and audio are required along with the cable requirements of 2 conductor shielded. See connection diagram.

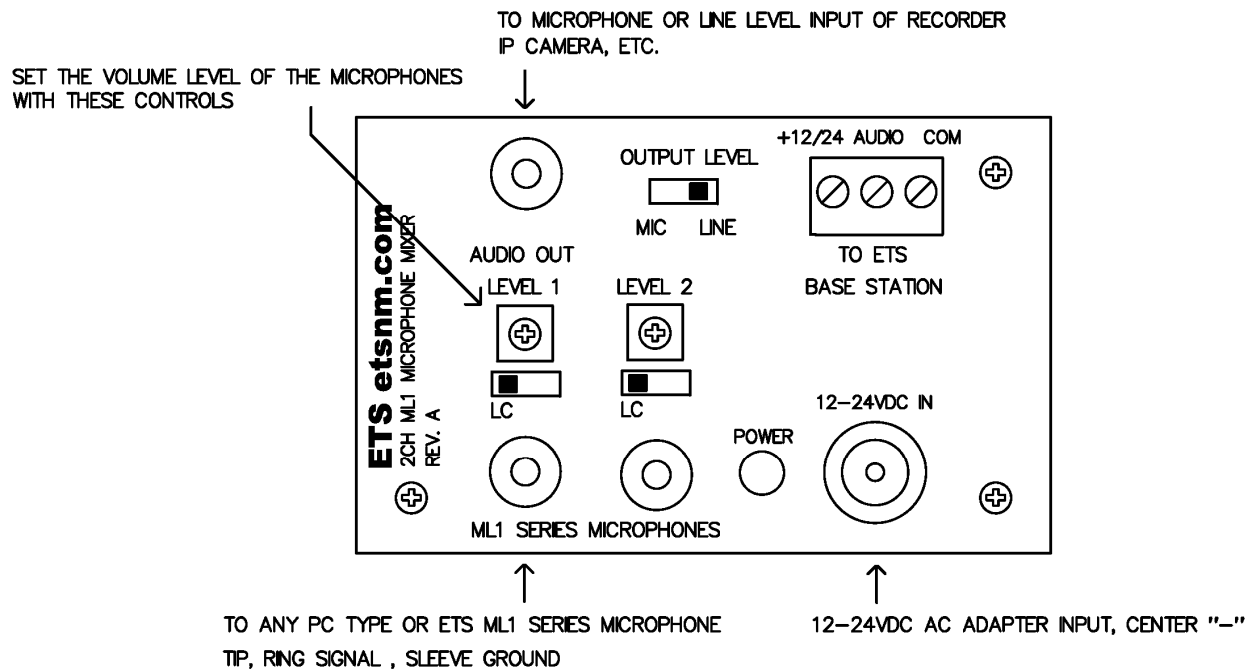


Figure 1

Caution

It may be against the law to install this microphone kit in certain environments. It may also be against the law to record conversations of the person(s) being monitored without their knowledge. It is the responsibility of the installation company and end-user to determine if the application of this product is legal. These laws vary from state to state. If you are not informed on these matters, consult a qualified attorney or contact the appropriate state agency. A sticker is provided with this kit for the applications where notification must be posted.

Warranty

All ETS products carry a one year parts and labor warranty. This warranty does not cover damages as a result of misuse, improper handling of the unit or exposure to extreme temperatures or moisture. At its discretion, ETS reserves the right to repair or replace this unit under the conditions of the warranty. If you experience problems with your equipment call ETS at: 505-888-3923 to obtain a return authorization number. Equipment requiring repair beyond the warranty period or units that have been damaged or are not covered under the warranty can be repaired by ETS for a minimal cost under most conditions.

Made in the USA
by
ETS Inc.